

Brother Wolf Pre-Show Checklist

Turn on the following in this order:

- Turn on Behringer X32 (sound board)
- Turn on switch on the top of the rack in the sound booth (powers the amps, paging system, wireless rack, and clear com).
- Turn on the d&b D6 Amplifier
- Unmute both amplifier channels on the d&b D6
- Turn on the Alesis ELEVATE 5 MKII Monitor in the audio room and sound booth.
- Turn on the Behringer EUROLIVE B205D (band monitor)
- Make sure to recall the scene: Brother Wolf v14
- Confirm all inputs and outputs are muted

- Set up Computer (Password: Brevard1)
- Plug in computer charger to power strip
- Turn the computer volume all the way up.
- Connect to the wifi listed as *WIFI*
- Plug the active USB cable into the computer (this connects the Presonus audio interface and the Behringer X32 to the computer)
- Turn on the presonus audio interface
- Plug the 3.5mm headphone cable into the computer headphone jack.
- Unmute mute groups one

- Check Clear Clear-Com
 - Spotlight house left operator (Channel C)
 - Spotlight house right operator (Channel C)
 - Light Board operator (Channel C)
 - Soundboard operator (Channel C)
 - Audio Qlab operator (Channel C)
 - Backstage left (Channel C)
 - Backstage right (Channel C)
 - Stage manager calling station (Channel C)

- Check the All Page/Intercom system in
 - Dressing Rooms
 - Backstage Bathroom
 - Audio Room
 - Sound Booth

- Check stage monitor mic feed in:
 - Dressing Rooms
 - Backstage Bathroom
 - Audio Room
 - Sound Booth

- Check to make sure all speakers are working with sound check song *Cue PRE*.
 - House left speaker (hanging from grid)
 - House right speaker (hanging from the grid)
 - Upstage left speaker (upstage catwalk)
 - Upstage right speaker (upstage catwalk)
 - House left speaker (house catwalk)
 - House right speaker (house catwalk)
 - Sub house left (backstage Left)
 - Sub house right (backstage Left)

- Check stage managers mic (to address the house in the case of an emergency)

- Video System
 - Turn on Camera
 - Turn on television in Men's dressing room
 - Turn on television in Women's Dressing Room
 - Turn on television in the Lobby (after the house has opened)

- Let the Lance Perl(SD) and Teila Vochatzer (SM) know when all is complete.
- Have an AWESOME show!

Sound Designer: Lance Perl
Perl.lance@gmail.com
843.605.2030

Morrison Playhouse
Director: Peter Savage